

Recommended Use Of The EasyDraw Syringe® and The PowerStop Handle®

Step 1 - Load Sampling Device


Insert the EasyDraw Syringe® into the appropriate slot on the Powerstop Handle® and remove end cap from syringe.

- If sampling for EPA Method 5035A low-level Protocol, insert syringe into one of the three 5 gram positions. Use the heavy position for dense clay, the light position for dry sandy soil, and the medium position for all others.
- There are also three 10 gram and one 13 gram positions to accommodate other methods.



Step 2 - Collect Sample

Push the EasyDraw Syringe® into freshly exposed soil. Continue pushing until the soil column inside the syringe has forced the plunger to the stopping point. Wipe all debris from the outside of the EasyDraw Syringe®. The soil plug should be flush with the mouth of the sampler. Remove any excess soil that extends beyond the mouth of the sampler. The EasyDraw Syringe delivers approximately 5, 10 or 13 grams. Actual weight will be determined at the laboratory.

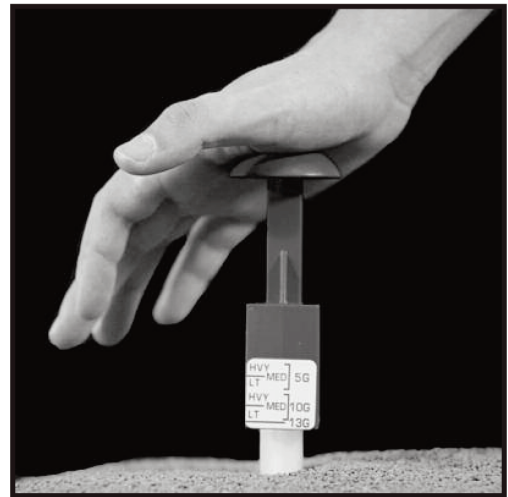


Step 3 - Eject Sample Into Vial

Remove the syringe from the Powerstop Handle®. Insert syringe into open end of a pre-tared 40-ml vial containing the appropriate preservative. Extrude the sample into the vial by pushing on the syringe plunger. Avoid getting dirt on the threads of the the 40-ml vial.

Cap vial immediately and put on ice or in an environment maintained at 4° C.

Option: Refill EasyDraw Syringe® and cap for use as a dry weight container.

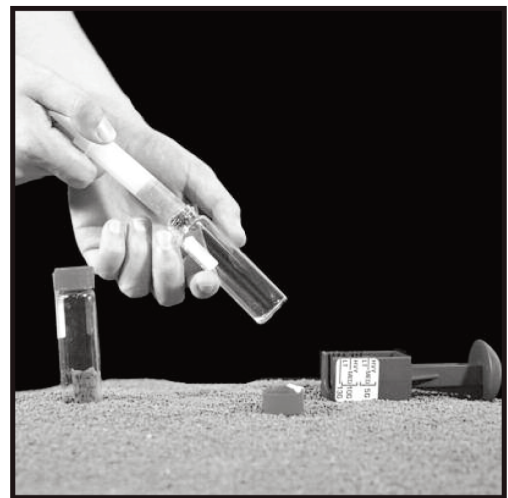

En Novative Technologies
2355 Bishop Circle West
Dexter, MI 48130
PHONE (920) 465-3960
FAX (920) 465-3963
TOLLFREE (888) 411-0757